

Broadband RF Connector Cross Reference Chart

Mfr.	Product	Device connector	Mating RFI connector type	RFI Part Number
3Com	AirConnect AP	MMCX Jack	MMCX Plug	RMX-9000-1A, 1B; RMX-9010-1A, 1B,
	Access points 7000 / 8000	SMA Female	SMA Male	RSA-3000-1B,-1B1,-1B-03,-1C,-1C-03,-A,-B,-B-SS,-B1,-C,-C1,-C2,-I,-X; RSA-3010-1B,-1B-04,-1C,-7,-B,-B-SS,-B1,-C,-C1,-C2,-X
	AirConnect AP 3CRWE74	MMCX Jack	MMCX Plug	RMX-9000-1A, 1B; RMX-9010-1A, 1B,
	Airconnect Access Point 3CRWE747A	MMCX Jack	MMCX Plug	RMX-9000-1A, 1B; RMX-9010-1A, 1B,
Breezecom / Alvarion	AP	Alvarion SMA Female	Alvarion SMA Male	RFS-2006
	SA	Alvarion SMA Female	Alvarion SMA Male	RFS-2006
	WB-10D	Alvarion SMA Female	Alvarion SMA Male	RFS-2006
	BreezeNET Pro.11 Access Point 10-D, Station Adapter 10-D, Workgroup Bridge 10-D	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
Buffalo	All products with external antenna ports	MC Card Jack	MC Card Plug	RMC-6010-B, B1
	PCMCIA Card, PCI Card	MC Card Jack	MC Card Plug	RMC-6010-B, B1
Cisco / Aironet	340, 350 AP (AIR-AP352E2R-x-K9)	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	340, 350 Wireless Bridge	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	340, 350 Workgroup Bridge (AIR-WGB352R)	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	350 Client Adapter (AIR-LMC35x)	MMCX Jack	MMCX Plug	RMX-9000-1A, 1B; RMX-9010-1A, 1B,
	350 Client Adapter (AIR-PCI35x)	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	Access Point 1200 (2.4Ghz only)	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	1400 Wireless Bridge	N Female	N Male	RFN-1005-2N,-3C,-3C1,-7,-B-03,-B1-03,-C1,-C2,-C2S; RFN-1006-3E,-3F,-3I,-2L2,-L6; RFN-1007-2SP,-2SX; RFN-1009-3E,-3I,-C,-C-03,-C1,-C2,-I,-X-04
	AIR-PCI352	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	1200 Wireless Bridge	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	Aironet PC Card	MMCX Jack	MMCX Plug	RMX-9000-1A, 1B; RMX-9010-1A, 1B,

RFI WiFi List

Mfr.	Product	Device connector	Mating RFI connector type	RFI Part Number
	PCMCIA card	MMCX Jack	MMCX Plug	RMX-9000-1A, 1B; RMX-9010-1A, 1B,
	PCI or ISA card	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	AIR-ANT5959, -ANT4941, -ANT1728, -ANT2506, -ANT3213, -ANT24120, -ANT2414S-R, -ANT1729, -ANT2012, -ANT3549, -ANT2410Y-R, -ANT1949, -ANT3338	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	AIR-ANT58G9VOA-N, -ANT58G100SSA-N, -ANT58G28SDA-N	N Female	N Male	RFN-1005-2N,-3C,-3C1,-7,- B-03,-B1-03,-C1,- C2,-C2S; RFN-1006-3E,-3F,-3I,-2L2,-L6; RFN-1007-2SP,-2SX; RFN-1009-3E,-3I,-C,-C-03,-C1,-C2,-I,-X-04
	AIR-LMC352	MMCX Jack	MMCX Plug	RMX-9000-1A, 1B; RMX-9010-1A, 1B,
	Intel PRO/Wireless AP WEAP2011BK	RP-BNC Female	RP-BNC Male	RP-1106-C,-NG
Proxim/Orinoco	PC Card	MC Card Jack	MC Card Plug	RMC-6010-B, B1
	Filotex	MC Card Jack	MC Card Plug	RMC-6010-B, B1
	AP-600/4000	RDM Jack; AP600compatible	RDM Plug; AP600compatible	RDM-6310-B
	Mini PCI	MHF Jack; U.FL compatible	MHF Plug; U.FL compatible	Cable assembly- not individual parts
	Cardbus	MHF Jack; U.FL compatible	MHF Plug; U.FL compatible	Cable assembly- not individual parts
	RL/2 Bridge, RL/2 PCI Card	RP-SMA Female	RP-SMA Male	RP-3000-1C,-1C1,-B,-C,-C1,-C2,-I; RP-3010-1B,-1C,-1C1
	RL/2 PC Card, RL/2 PCMCIA Card	MMCX Jack	MMCX Plug	RMX-9010-B
	Harmony 802.11 PC Card, Harmony PCMCIA Card	RP-MMCX Jack	RP-MMCX Plug	RP-9010-B
	Harmony 802.11 PCI Card	RT-SMA Female	RT-SMA Male	RT-3000-B, C, X, I
	Harmony AP, 802.11AP, RangeLan AP	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	Stratum MP	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
SMC	SMC AP/Bridge	RP-TNC Female	RP-TNC Male	RP-1202-C, C1, C2, L6, X, I, 1B
	SMC 2655W, SMC 2665W	MCX Jack	MCX Plug	RMX-8000-1B,-B,-B1; RMX-8010-1B,-B,-B1
Motorola	Canopy Access Point Module 5200AP/5700AP	RJ-45 Socket	RJ-45 PLUG	RJ45-8P8C